


Replacing a fountain pen nib

1. Unscrew the nib housing from the pen.



2. Unscrew the nib from the nib housing.

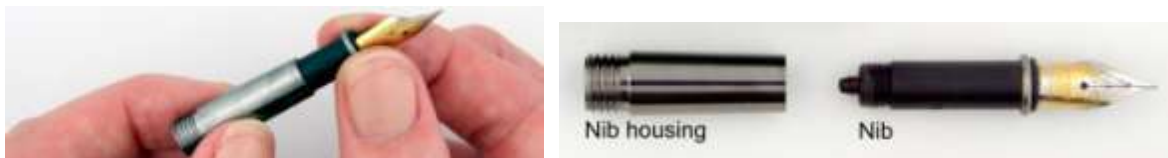

3. New nibs come with gold trim rings. If the pen is not gold, the gold trim ring can be removed from the new nib and be replaced with the trim ring from the original pen. Trim rings can be removed by pulling them downward off of the nib.



4. Screw the new nib into the original nib housing.



5. Screw the nib housing back into the pen.

